

Model: CAT45CMBK





Table of contents

Precautions to avoid possible exposureto excessive microwave energy	3
Important safety instructions	3
Causes of damage	6
Installation	7
Electrical installation	9
Your new appliance	10
Control panel	10
Touch keys and display	10
Function and screen display	10
Parameter adjustment	10
Cooling fan	
Accessories	
Before using the appliance for the first time	16
Setting the clock	<mark>.</mark> 16
Heating up the oven	16
Cleaning the accessories	16
Setting the oven	16
Setting the type of heating and temperature	16
Rapid preheating	17
The microwave	18
Notes regarding ovenware	18
Microwave power settings	19
Setting the microwave	19
Micro Combi operation	20
Setting Microwave Combi operation	<mark>20</mark>
Automatic programmes	21
Setting a programme	21
Defrostig programmesn	23
Setting the pre-set cooking	<mark>24</mark>
Setting the time-setting options	<mark>2</mark> 4
Setting the cooking time	24
Setting the clock	24
Setting the timer	24
Childproof lock	25
Switching on the childproof lock	25
Switching off the childproof lock	
Care and cleaning	<mark>25</mark>
Cleaning agents	<mark>2</mark> 6
Technical data	27
Energy consumption	27
Malfunction table	
Acrylamide in foodstuffs	
Energy and environment tips	
Saving energy	
Environmentally-friendly disposal	29

PRECAUTIONS TO AVOID POSSIBLE EXPOSURETO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (b) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING


To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- 1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 2. Read and follow the specific: "PRE-CAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICRO-WAVE ENERGY".
- 3. Keep the appliance and its cord out of reach of children less than 8 years.
- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5. WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- 6. WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- 7. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- 8. Only use utensils that are suitable for use in microwave ovnes.

- 9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- 10. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- 11. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- 12. Eggs in their shell and whole hardboiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- 13. The oven should be cleaned regularly and any food deposits removed.
- 14. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could a dversely affect the life of the appliance and possibly result in ahazardous situation.
- 15. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
- 16. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
- 17. This appliance is intended to be used in normal domestic households however use in some other locations may carry a reduced guarantee. Please refer to the guarantee card supplied with the appliance.
- 18. Care should be taken not to displace the turntable when removing containers from the appliance. (For fixed appliances and built-in appliances being used equal or higher than 900mm above the floor and having detachable turntables. But this is not applicable for appliances with horizontal bottom hinged door.)
- 19. The appliance shall not be cleaned with a steam cleaner.
- 20. WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- 21. WARNING: Accessible parts may become hot during use. Young children should be kept away.
- 22. Steam cleaner is not to be used.
- 23. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- 24. Surface of a storage drawer can get hot.
- 25. WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- 26. During use the appliance becomes hot Care should be taken to avoid touching heating elements inside the oven.
- 27. Metallic containers for food and beverages are not allowed during microwave cooking.
- 28. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- 29. The appliance is intended to be used buit-in.

- 31. The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)
- 32. WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

READ CAREFULLY AND KEEP FORFUTURE REFERENCE HOUSEHOLD USE ONLY (NOT FOR COMMERCIAL USE)

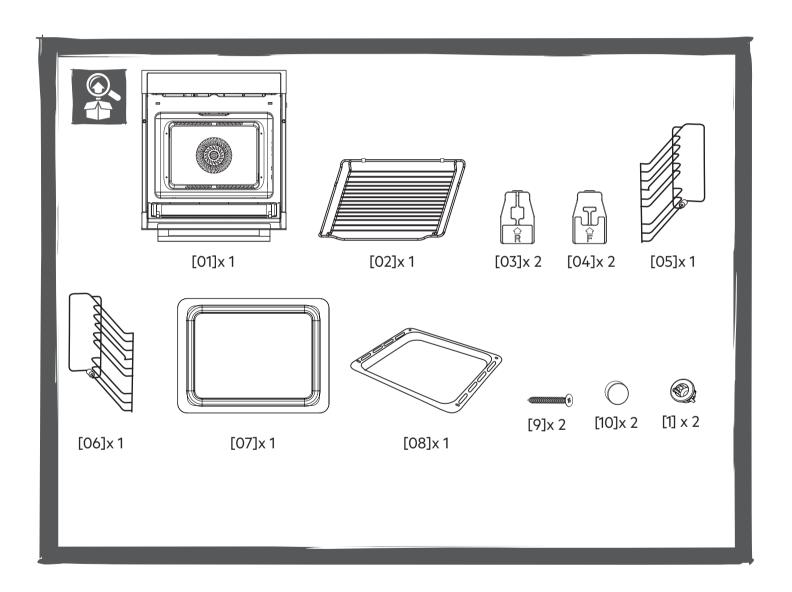

Causes of damage

Caution!

- Creation of sparks: Metal e.g. a spoon in a glass must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.
- Water in the hot cooking compartment: Never pour water into the hot cooking compartment. This will cause steam. The temperature change can cause damage.
- Moist food: Do not store moist food in the closed cooking compartment for long periods. Do not use the appliance to store food. This can lead to corrosion.
- Cooling with the appliance door open: Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.
- Heavily soiled seal: If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.
- Operating the microwave without food: Operating the appliance without food in the cooking compartment may lead to overloading. Never switch on the appliance unless there is food in the cooking compartment. An exception to this rule is a short crockery test (see the section "Microwave, suitable crockery").
- Using the appliance door for standing on or placing objects on: Do not stand or place anything on the open appliance door. Do not place ovenware or accessories on the appliance door.
- Transporting the appliance: Do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.
- Microwave popcorn: Never set the microwave power too high. Use a power setting no higher than 600 watts. Always place the popcorn bag on a glass plate. The disc may jump if overloaded.
- Liquid that has boiled over must not be allowed to run through the turntable drive into the interior of the appliance. Monitor the cooking process. Choose a shorter cooking time initially, and increase the cooking time as required.
- The oven should be cleaned regularly and any food deposits removed since they may explode, even after microwave heatinghas ended.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Installation


Fitted units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cupboard must not have a back wall behind the appllance.
- A gap of at least 45 mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cupboard must have a ventilation opening of 250 cm² on the front. To achieve this, cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteec if it has been installed in accordance with these installationinstructions.
- The fitter is liable for any damage resulting from incorrectinstallation.
- The units into which the appliance is fitted must be heat-resistant up 90 °C.

Installation dimensions

The dimensions in the figures are in mm. Installation height not less than 850mm


Ventilation openings

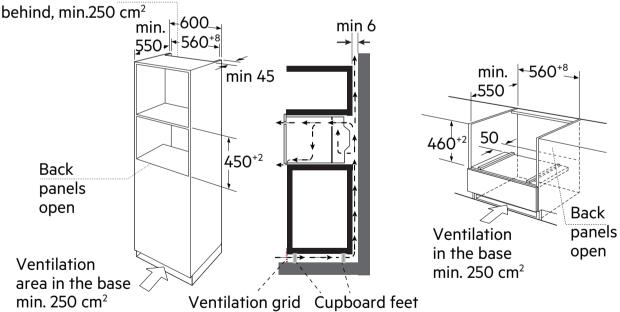

Note: There should be gap above the oven.

Building in

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
- 1. Carefully push the microwave into the box, making sure that it is in the centre.
- 2. Open the door and fasten the microwave with the screws that were supplied.

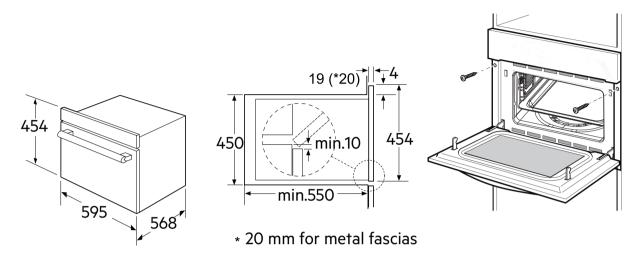

- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.
- Don't use under the work surface and that it must not be subject to spillage from containers onto surfaces under which the appliance is installed.

ELECTRICAL INSTALLATION

All installation must be carried out by a competent person or qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate.

- The circuit supplying the oven must be protected by a 16A RCD.
- Place the oven so that the outlet or double pole switch used for power connection may be reached easily.
- Do not place the power cord in contact with hot surfaces and do not pinch it to the product cover.
- The temperature of the power cord shall not reach a temperature that is 50 °C above the ambient temperature.

- Regularly check the power cord for damage. If the supply cord is damaged, it must be replaced with a new one with the same dimensions and plastic insulation and that may withstand the electrical current required by the oven.
- Test the heating elements for 3 minutes when the connection is complete.
- If the oven is to be connected directly to the mains, a double pole switch suitable for carrying the desired load as per the current legislation and with a clearance of 3mm between its contact points shall be installed between the oven and the mains. The Earth wire shall not be cut off by the double pole switch.



WARNING: This is a Class I appliance and MUST be earthed.

This appliance is supplied with a 3 core mains cable coloured as follows:

Brown = L or Live

Blue = N or Neutral

Green and Yellow = E or Earth



To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services.

The manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance. Any permanent electrical installation must comply with the latest wiring regulations applicable to your country and for your own safety a qualified electrician or contractor should undertake the electrical installation.

Your new appliance

Use this section to familiarise yourself with your new appliance.

The control panel and the individual operating controls are explained.

You will find information on the cooking compartment and the accessories.

Control panel



Touch keys and display

The touch keys are used to set the various additional functions On the display, you can read the values that you have set.

Symbol	Function
Ф	Cancel
≋	Microwave
(S) (B) 35	Kitchen Timer/Childproof Lock
$\overline{\Sigma}$	Pre-set
(ii)	Preheat
F	Function
- +	Parameter adjustment
	Slider control bar
Α	Auto Menu
89	Clock/Temperature
ũ	Weight
- <u></u> Д-	Light bulb
DII	Start/Pause

Function and screen display

Use the function keys to set the type of cooking.

Function	Use
Conventional	The top and bottom elements work together to provide conventional cooking. The oven needs to be preheated to the required temperature: ideal for slow cooking dishes such as casseroles and stews.
@ Convection	For baking on several levels(e.g. baking trays of chocolate chip cookies).
一 Conventional	Convenient and time savings, up to 4 dishes can be cooked simultaneously on different shelves without mixing of taste or smell.
Radiant Grilling	Best results can be obtained from using the top shelf for small items and lower shelves for larger items.
— Double Grill	For gratin dishes and finishing roasted vegetables.
Double Grilling	The inside radiant elements and outside top element work simultaneously giving a rapid and even grilling heat, therefore effectively browning the top surface of the food.

Use
Pizza is perfectly cooked with extra heat from both bottom and sides of the oven, guaranteening pizza bases are crispy.
This is ideal for slow cooking dishes such as casseroles, stews.
Defrost, reheat and cooking.
For reducing large portions'cooking time with browning finish.
This function is suitable where quick browning is required; will cook the ingredients down to the core.
This function is suitable where quick under browning is required; will cook the ingredients down to the core.
3 defrosting programmes
13 cooking programmes The type of heating and cooking time are set by weight.

Parameter adjustment

Use the adjusting keys to set the parameters.

parameter	function		
Auto menu	Select 13 automatic p From P 01 to P 13.	Select 13 automatic programmes. From P 01 to P 13.	
	Select the temperatucooking (°C)	ire of	
	—: 100-235 <u>®</u>	: 50-250	
Temperature		: 50-235	
	<u>२</u> : 50-235	€ : 50-250	
	: 100-235	· 50-250	
	र्हें: 100-250 💥 -	<u> </u>	
	····: 100-235		
Weight	Set the weight of co	Set the weight of cooking.	
Time	Set the of cooking ti	Set the of cooking time.	
Microwave	•	Select microwave power. 100W, 300W, 500W, 700W and 900W.	

Cooling fan

Your appliance has a cooling fan. The cooling fan switches on during operation.

The hot air escapes above the door. The cooling fan continues to run for a certain time after operation. Caution!

Do not cover the ventilation slots. Otherwise, the appliance will overheat.

Notes

- The appliance remains cool during microwave operation. The cooling fan will still switch on.
- The fan may run on even when microwave operation has ended.


Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

Accessories


Note:

Type and quantity of accessories is subject to actual demand.

Grill rack

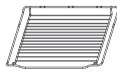


For grilling, e.g. steaks, sausages and for toasting bread.

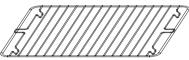

Baking tray

For safety reasons, the baking tray should beplaced on the side hanger instead of being placed directly on the bottom board of the cavity.

Baking tray-Enamel tray

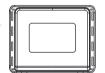


For making cake roll and roasting whole chicken.


• When cooking with microwave function, the use of enameltray is prohibited.

Baking tray-Glass tray


- When cooking with microwave function, please use the glass tray.
- Used for catching liquids, such as water and grease when food is baked.
- In order to ensure the best cooking effect, the glass tray should be placed in the bottom of the side hanger, as shown in the figures below.
 The glass tray should be pushed along the lowest guide rails of the side hanger in place.

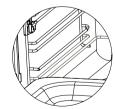



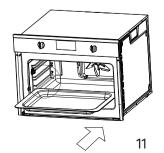




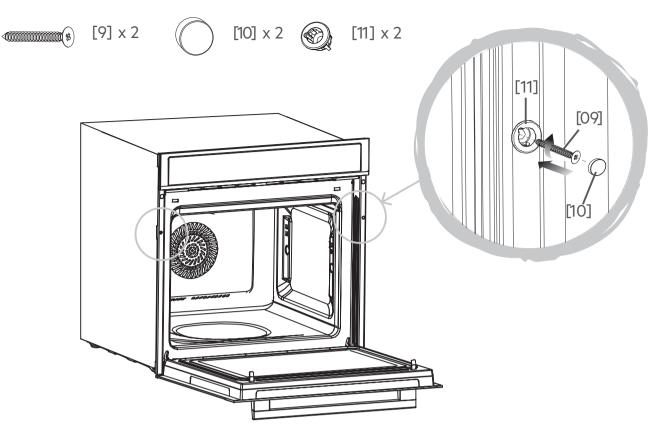


Once the oven has been lifted into place inside the appliance housing, locate the two holes in the casing of the oven and fix it into place using [09], [10] and [11]


Caution: Do not over tighten the screws [09] to avoid damage to the oven or appliance housing - use a screwdriver only!


Installation of the ceramic clips and side rails

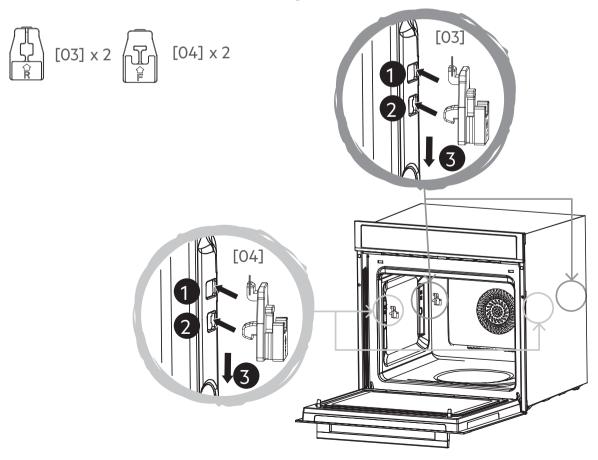


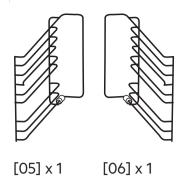


Left side rail installation [05]

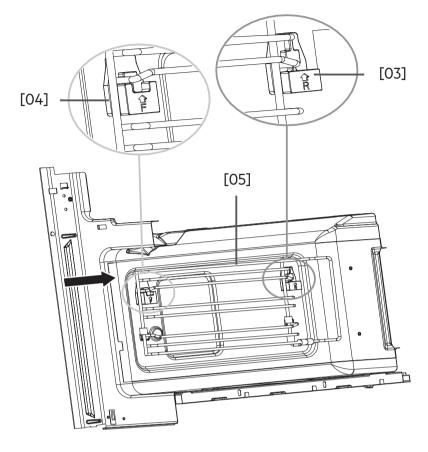


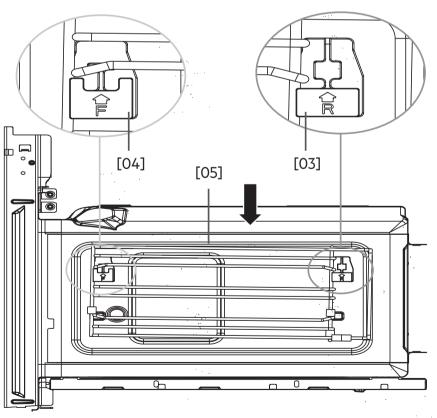


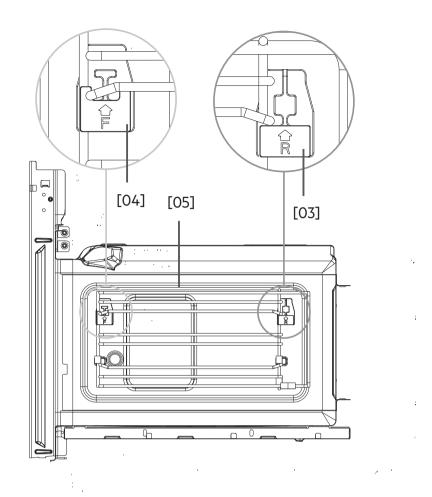

Right side rail installation [06]

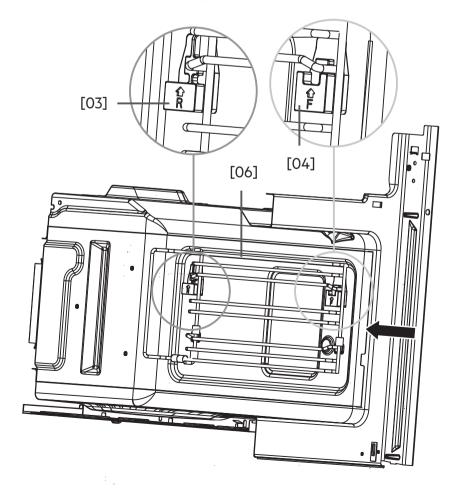

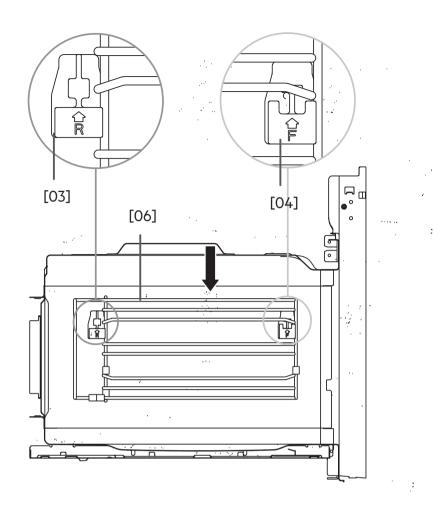

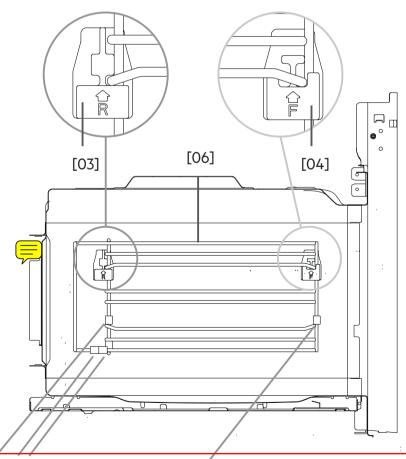

These spacers insulate the side rail from the oven wall. They MUST remain inplace.

Before using the appliance for the first time

Here you will find everything you need to do before using your oven to prepare food for the first time. First read the section on.

Safetyinforation.

Setting the clock

- 1. In waiting state, touch (5) the key to enter clock setting mode."00:00" will display and the hour figures will flash.
- 2. Touch or + or slide the ——— to set the hour figures. The input time should be within 0--23.
- 3. Touch (5) to confirm, the minute figures will flash.
- 4. Touch or + or slide the to set the minute figures. The input time should be within 0--59.
- 5. Touch (5) to finish clock setting, ":" will flash. The time is set. And the appliance will enter waiting state.

Cleaning the accessories

Before you use the accessories for the first time, clean them thoroughly with hot soapy water and a soft dish cloth.

Heating up the oven

To remove the new cooker smell, heat up the oven when it is empty and closed One hour with Convection at 250 °C is ideal. Ensure that no packaging remnants have been left in the cooking compartment.

- 1. In waiting state, touch **F** key once. and the default temperature will light in the screen.
- 2. Touch **F** key repeatedly till 💫 lights. The default temperature of convection will display.
- 3. Touch or + or slide theto set the temperature to 250°C
- 4. Touch (5) to enter cooking time setting mode. "00:00" will flash.
- 5. Touch or + or slide the ——— to set the cooking time to 60 minutes
- 6. Touch the ⊳|| key. The oven begins to heat up,

Setting the oven

There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting. You can also select the oven cooking time for your dish. Please refer to the section on **Setting the timmesetting options**.

Setting the type of heating and temperature

Example: Radiant Grilling at 200 °C for 25 minutes.

- 1. In waiting state, touch **F** key once. and the default temperature will light in the screen.
- 2. Touch **F** keyrepeatedly till lights. The default temperature of radiant grilling will display.
- 3. Touch or + or slide theto set the temperature to 200°C
- 4. Touch (5) to enter cooking time setting mode. "00:00" will flash.
- 5. Touch or + or slide the to set the cooking time to 25 minutes.
- 6. Touch the ▷ | key. The oven begins to heat up.

Opening the oven door during operation

Operation is suspended. After closing the door, touch the ▷II key. Operation continues.

Pausing operation

Touch the $\triangleright ||$ keyto pause operation. Then touch the $\triangleright ||$ key to continue operation.

Changing the cooking time

Changing the temperature

This can be done at any time.

Touch - or + or slide theto set the temperature.

Cancelling operation

This can be done at any time. Touch the $\binom{1}{1}$ key to enterinto the waiting state.

Rapid Preheating

With rapid preheating, your oven reaches the set temperature particularly quickly. Rapid Preheating is available for the following types of heating:

	Conventional	□	₩ ?	Double Grill+Fan
■ 🛞	Convection			Double Grilling
■ <u></u>	Conventional + Fan	<u> </u>	₩	Pizza
	Radiant Grilling			Lower Heater Element

To ensure an oven cooking result, only put your food in the cooking compartment when the preheatingphase is complete.

- 1. Setting the type of heating and temperature.
- 2. Touch the wkey.

The wyshol lights up in the display. The oven begins to heat up.

The preheating process is complete

A signal sounds. The (n) symbol in the display blinks. Put your dish in the oven.

Cancelling rapid preheating

During setting the rapid preheating function, touch the $\binom{1}{1}$ key can cancel the function. During rapid preheating, touch the $\binom{1}{1}$ can cancel the function.

Note: Only when you can hear alarm and preheating icon is blinking you can open the door and put food inside.

The microwave

Microwaves are converted to heat in foodstuffs. The microwave can be used solo, i.e. on its own, or in combination with a different type of heating. You will find information about ovenware and how to set the microwave.

Note:

The step quantities for the adjustment time of the coding switch are as follow.

0-1 min : 5 seconds 1-3 min : 10 seconds 3-15 min : 30 seconds 15-60 min : 1 minute Over 60 min : 5 minutes

Notes regarding ovenware Suitable ovenware

Suitable dishes are heat-resistant ovenware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use ovenware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

Unsuitable ovenware

Metal ovenware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

Caution!

Creation of sparks: metal-e.g.a spoon in a glass- must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could destroy the glass on the inside of the door.

Ovenware test

Do not switch on the microwave unless there is food inside. The following ovenware test is the only exception to this rule.

Perform the following test if you are unsure whether your ovenware is suitable for use in the microwave:

- 1. Heat the empty ovenware at maximum power for $\frac{1}{2}$ to 1 minute.
- 2. Check the temperature occasionally during that time. The ovenware should still be cold or warm to the touch. The ovenware is unsuitable if it becomes hot or sparks are generated.

Microwave power settings

Use the $\stackrel{\text{local}}{\approx}$ key to set the desired microwave power.

100W	-Defrosting sensitive/delicate foods -Defrosting irregularly-shaped foods -Softening ice cream -Allowing dough to rise	
300 W	-Defrosting -Melting chocolate and butter	
500 W	-cooking rice, soup	
700 W	-Reheating -cooking mushrooms,shell fish -cooking dishes containing eggs and cheese	
900 W	-Boiling water, reheating -cooking chicken, fish, vegetables	

Notes

- When you touch a key, the selected power lights up.
- The microwave power can be set to 900 watts for a maximum of 30 minutes. With all other power settings a maximum cooking time of 1 hour 30 minutes is possible.

Setting the microwave

Example: Set microwave power to 300 W and cooking time to 17 minutes.

- 2. Touch or + orslide the ——— to set the cooking time to 17 minutes.
- 3. Touch the \Longrightarrow key to activate the microwave power. Then touch or + or slide the to set the microwave power to 300W.
- 4. Touch the ⊳|| key.

Operation begins. The cooking time starts counting down in the display.

The cooking time has elapsed

A signal sounds. Microwave operation has finished.

Opening the oven door during operation.

Operation is suspended. After closing the door, touch the || key. operation continues.

Changing the cooking time

This can be done at anytime. Touch - or + or slide the ———— to set the cooking time.

Changing the microwave power setting

This can be done at any time. Touch the \Longrightarrow key and then touch - or + or slide the ———— to set the microwave power

Pausing operation

Cancelling operation

This can be done at any time. Touch the \bigcirc key to enter into the waiting state.

Notes

If you open the appliance door during cooking, the fan maycontinue to run.

Micro Combi operation

This involves simultaneous operation of the grill and the microwave. Using the microwave makes your dishes ready more quickly, but they are sill nicely browned.

You can switch on all microwave power settings.

Exception: 700 and 900 watts

Setting Microwave Combi operation

Example: \$\iff \text{\tin}\text{\texi}\text{\text{\text{\text{\texi}\text{\text{\text{\text{\texict{\texi}\text{\text{\text{\texi}}}\text{\text{\text{\text{\texit{\text{\text{\texit{\text{\tet

- 1. In waiting state, touch ﷺ key, and then touch **F** epeatedly to set Micro Combi mode. Stop touching when 瓣 display in the screen. The default microwave power will display and the default temperature will flash.
- 2. Touch or + or slide the _____ to set the temperature to 190°C
- 3. Touch the (b) key to confirm the temperature. The default cooking time will flash, and touch or + or slide the ———— to set the cooking time to 17 minutes.
- 4. Touch the \lessapprox key. The default power will blink. Then touch or + or slide the _____ to set the microwave power to 500W.
- 5. Touch the ▷|| key. The oven begins to heat up. Appliance operation begins. The cooking time starts counting down.

The cooking time has elapsed

A signal sounds. Combination mode has finished.

Opening the oven door during cooking

Operation is suspended. After closing the door, touch the ▷||key briefly.

The programme will then continue.

Pausing operation

Touch the | | key briefly. The oven is paused. Touch the | | key again to continue operation.

Changing the cooking time

This can be done at any time. Touch the key repeatedly till the cooking time flashes, and then touch - or + or slide the ______ to set the cooking time.

Changing the microwave power setting

This can be done at any time. Touch the \Longrightarrow key and then touch - or + or slide the \Longrightarrow to set the microwave power.

Changing the temperature

This can be done at any time.

Touch - or + or slide the _____ to set the temperature .

Cancelling operation

This can be done at any time. Touch the key to enter into the waiting state.

Automatic programmes

The automatic programmes enable you to prepare food very easily. You select the programme and enter the weight of your food. The automatic programme makes the optimum setting. You can choose from 13 programmes.

Always place the food in the cold cooking compartment.

Setting a programme

- 1. In waiting state, touch **A** key twice to enter the Auto menu function. The first programme number blinks in the screen.
- 2. Touch or +_or slide the ______to select the programme number.
- 3. Touch the ☐ key.
- 4. Touch or + or slide the _____ to set the weight, cooking time will shown.
- 5. Touch the ▷ key. The programme starts. You can see the cooking time is counting down.

Auto Menu

Programme no.	Item	Weight(g)	Accessory layer and accessory
	= 1 .11	200	451
P 01**	Freshvegetables	400	1 st layer, glass tray
		600	
P 02**	Potatoes peeled/cooked	<u>240</u> 480	1 ^{s†} layer, glass tray
1 02	1 oraroes pecica, cookea	720	i layer, glass may
		450	3 rd laver, grill rack
P 03	Baked potatoes	1000	3 rd layer, grill rack
P 04	Chicken pieces(frozen)	450	3 rd layer, grill rack
		400	
P 05*	Cake	500	2 nd layer, grill rack
		600	
P 06*	Apple pie	2400	2 nd layer, grill rack
P 07*	Quiche	1000	3 rd layer, grill rack
	Reheat soup	200	
P 08**		400	1 st layer, glass tray
		600	
**		250	ast
P 09**	Reheat plate	350	1 st layer, glass tray
		100	
P 10**	Reheat sauce/stew	200	1 st layer, glass tray
		300	1 12,01, 9.200 112,
		200	
P 11	Frozen Pizza	400	3 rd layer, grill rack
		600	
P12*	Frozen oven chips	300	
		400	3 rd layer, enamel tray
	·	500	
P 13	Lasagna	1600	3 rd layer, grill rack

From the bottom to the top, the number of layers is from the first to the fourth.

Notes

- The programmes with a * are preheated. During preheating, the cooking time pauses and the preheating symbol is on. After preheating, you will hear an alarm and the preheating symbol will llink.
- The programmes with ** only use the microwave function.

Programme has ended

A signal sounds. The oven stops heating.

Changing the programme

Once you have started the programme, the programme number and weight cannot be changed.

Cancelling the programme

Touch the $\binom{1}{2}$ key to cancel operation.

Changing the cooking time

If using automatic programmes, you cannot change the cooking time.

Defrosting programmes

You can use the 3 defrosting programmes to defrost meat, poultry and bread.

- 1. In waiting state, touch **A** key once to enter the Defrost function. The first programme number blinks in the screen.
- 2. Touch or + or slide the _____ to select the programme number.
- 3. Touch the 肖 key.
- 4. Touch or + or slide the _____ to set the weight, cooking time will shown.
- 5. Touch the ▷|| key. The programme starts. You can see the cooking time is counting down.

Notes

Preparing food

Use food that has been frozen at -18 °C and stored in portion sized quantities that are as thin as possible. Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the programme.

- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.
- Ovenware

Place the food in a microwaveable shallow dish, e.g. a china orglass plate, but do not cover.

- When defrosting chicken and chicken portions (d 01), an audible signal will sound on two occasions to indicate that the food should be turned.
- Resting time

The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand. After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

Programme no.	Defrost	Weight range in kg
d 01*	meat	0.10 - 1.50
d 02*	poultry	0.10 - 1.50
d 03*	fish	0.10 - 0.80

^{*}During defrosting, place the food on the glass tray.

Then touch start key to continue defrosting.

^{**}If you hear 3 beeps, turn the food over.

Setting the pre-set cooking

More flexibility and convenience: The appliance can be programmed to preset the cooking end time and duration.

- 1. In waiting state, touch the $\overline{\backslash}$ key. The $\overline{\backslash}$ symbol lights up in the display and the hour figures will
- 2. Touch or + or slide the _____ to set the hour figures. The input time should be within 0--23.
- 3. Touch $\overline{\Sigma}$ to confirm, the minute figures will flash.
- 4. Touch or + or slide the _____ to set the minute figures. The input time should be within 0--59.
- 5. Touch $\overline{\backslash}$ to finish the pre-set time setting.
- 6. Setting the type of heating and temperature.
- 7. Touch ▷|| to finish the setting ∘

The pre-set time has elapsed

An audible signal sounds. The oven starts cooking.

Specification

Before setting the pre-set cooking, the clock must has been set. Kitchen Timer can not be set after the pre-set cooking setting.

Setting the time-setting options

Your oven has various time-setting options. You can use the (5) key to call up the menu and switch between the individual functions. A time-setting option that has already been set can be changed directly with the parameter knob.

Setting the cooking time

The cooking time for your meal can be set on the oven. When the cooking time has elapsed, the oven switches itself off automatically. This means that you do not have to interrupt other work to switch off the oven. The cooking time cannot be -accidentally exceeded.

The oven starts. The cooking time counts down in the display.

The cooking time has elapsed

An audible signal sounds. The oven stops heating

Setting the clock

Refer to Before using the appliance for the first time.

Changing the clock

Repeat the steps of setting the clock.

Setting the timer

You can use the timer as a kitchen timer. It runs independently of the oven. The timer has its own audible signal. In this way, you can tell whether it is the timer or a cooking time which has elapsed.

- In waiting state. Touch key to enter kitchen timer. "00:00min" will flash.
 Touch or + or slide the to set the timer time.
- 3. Touch $\bigotimes_{\Theta_{35}}$ key to start timer.

Childproof lock

The oven has a childproof lock to prevent children switching it on accidentally.

The oven will not react to any settings. The timer and clock can also be set when the childproof lock has been switched on.

Switching on the childproof lock

In waiting state, touch and hold the \bigcirc key for approx. 3 seconds. There will be a long beep and the \bigcirc symbol appears in the display. The childproof lock is activated.

Switching off the childproof lock

In locked state, touch and hold the $\bigcirc_{\theta s}$ key for approx. 3 seconds. There will be a long beep and the \bigcirc symbol goes out in the display. The childproof lock is deactivated.

Care and cleaning

With careful care and cleaning your microwave oven will retain its looks and remain good order. We will explain here how you should care for and clean your appliance correctly.

↑ Risk of electric shock.!

Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.

↑ Risk of burns!

Never clean the appliance immediately after switching off. Let the appliance cool down.

⚠ Risk of serious damage to health!

Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the cooking compartment door or the door seal is damaged. Contact the after-sales service.

Notes

- Slight differences in colour on the front of the appliance are caused by the use of different materials, such as glass, plasticand metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Unpleasant odours, e.g. after fish has been prepared, can be removed very easily. Add a few drops of lemon juice to a cup of water. Place a spoon into the container as well to prevent delayed boiling. Heat the water for 1 to 2 minutes at maximum microwave power.

Cleaning agents

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Do not use

- sharp or abrasive cleaning agents,
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers to clean the door seal,
- hard scouring pads and sponges,
- cleaning agents with high concentrations of alcohol.

Wash new sponge cloths thoroughly before use.

Allow all surfaces to dry thoroughly before using the appliance again.

Area	Cleaning agents
Appliance front	Hot soapy water:
	Clean with a dish cloth and dry with a soft cloth. Do not
	use glass cleaners or metal or glass scrapers for cleaning.
Appliance front with stainless steel	Hot soapy water:
	Clean with a dish cloth and dry with a soft cloth. Remove
	flecks of limescale. grease, starch and albumin (e.g. egg
	white)immediately. Corrosion can form under such residues.
	Special stainless steel cleaning agents can be obtained from
	the after-sales service or froms pecialist shops. Do not use
	glass cleaners ormetal or glass scrapers for cleaning.
Cooking compartment	Hot soapy water or a vinegar solution:
	Clean with a dish cloth and dry with a soft cloth.
	If the oven is very dirty: Do not use oven spray or other
	aggressive oven cleaners or abrasive materials. Scouring
	pads, rough soonges and pan cleaners are also unsuitable.
	These items scratch the surface. Allow the interior surfaces
	to dry thoroughly.
Recessin cooking compartment	Damp cloth:
	Ensure that no water seeps through the turntable drive into
	the appliance interior.
Wire racks	Hot soapy water:
	Clean using stainless steel cleaningagent or in the dishwasher.
Door panels	Glass cleaner:
	Clean with a dish cloth. Do not use a glass scraper.
Seal	Hot soapy water:
	Clean with a dish cloth, do not scour.
	Do not use a metal or glass scraper forcieaning.
-	

Technical data

Rated Voltage/Frequency	230 V~ 50 Hz
Microwave Input	1650 W
Microwave Output	900 W
Convection	1700 W
Grill	2200 W
Maximum Power	3000 W

Energy consumptionProduct information for power consumption and maximum time to reach applicable low power mode.

Standby mode	0.8 W
The maximum time needed for the microwave oven to automatically reach the applicable low power mode or condition.	20 minutes

Malfunction table

Malfunctions often have simple explanations. Please refer to the malfunction table before calling the after-sales service.

If a meal does not tum out exactly as you wanted, refer to the Expert Cooking Guide section, where you will find plenty of cooking tips and tricks.

⚠ Risk of electric shock!

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.

Malfunction table

Problem	Possible cause	Remedy/information		
The appliance does not work.	Faulty circuit breaker.	Look in the fuse box and check that		
		thecircuitbreaker for the appliance is		
		in working order.		
	Plug not plugged in.	Plug in the plug.		
	Power cut.	Check whether the kitchen light works.		
The appliance does not work. 🖰	Childproof lock is active.	Deactivate the childproof lock (see		
appears in the display panel.		section: Childproof lock).		
The microwave does not	Door not fully closed.	Check whether food residue ordebris		
switch on.		is trapped in the door.		
It takes longer than before for	The selected microwave power	Select a higher power level.		
the food to heat up in the	level is too low.			
microwave	A larger amount than usual has	Double the amount = almost double		
	been placed in the appliance.	the cooking time.		
	The food was colder than usual.	Stir or turn the food during cooking.		
A particular operating mode	The temperature, power level or	r Choose permitted settings.		
or power level cannot be set.	combined setting is not possible			
	for this operating mode.			
$E_{-\square_{i}^{+}}$ appears in the display panel.	The thermal safety switch-off	Call the after-sales service.		
2 3.	function has been activated.			
E-04 appears in the display panel.	The thermal safety switch-off	Call the after-sales service.		
	function has been activated.			
E-17 appears in the display panel.	Rapid heating has failed.	Call the after-sales service.		

Acrylamide in foodstuffs

Which foods are affected?

Acrylamide is mainly produced in grain and potato products that are heated to high temperatures, suchas potato crisps, chips, toast, bread rolls, bread, fine baked goods (biscuits, gingerbread, cookies).

	Tips for keeping acrylamide to a minimum when preparing food.			
General	Keep cooking times to a minimum. Cook meals until they are golden brown but not too dark. Large, thick pieces of food contain less acrylamide.			
Baking biscuits Oven chips	Max. 200°C in Top/bottom heating or max. 180°C in 3D hot air or hot air mode. Max. 190°C in Top/bottom heating or max. 170°C in 3D hot air or hot air mode. Egg white and egg yolk reduce the formation of acrylamide. Distribute thinly and evenly over the baking tray. Cook at least 400 g at once on a baking tray so that the chips do not dry out.			

Energy and environment tips

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

Saving energy

- Only preheat the oven if this is specified in the recipe or in the operating instruction tables.
- Use dark, black lacquered or enamelled baking tins. The yabsorb the heat particularly well.
- Open the oven door as infrequently as possible while you are cooking, baking or roasting.
- It is best to bake several cakes one after the other. The oven is still warm. This reduces the baking time for the second cake.
 - You can also place two loaf tins next to each other.
- For longer cooking times, you can switch the oven off 10minutes before the end of the cooking time and use theresidual heat to finish cooking.

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.




This appliance complies with European Directive 2012/19/EC on Waste Electrical and Electronic Equipment (WEEE). The directive gives a framework for the collection and recycling of old appliances, which is valid across the EU.

Heating food



Risk of scalding!

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only moves a little, the hot liquid can suddenly boil over and spatter. When heating liquids, always place a spoon in the container. This will prevent delayed boiling.

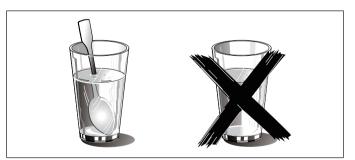






Cata Appliances UK Limited

Good Hope Close, Normanton Industrial Estate, Normanton, West Yorkshire, WF6 1TR, United Kingdom

www.cata-appliances.co.uk www.cnagroup.es



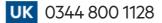



service@cata-appliances.co.uk www.sparezone.co.uk