



# Touch Control Ceramic Hob

## UBTCC60LC.1

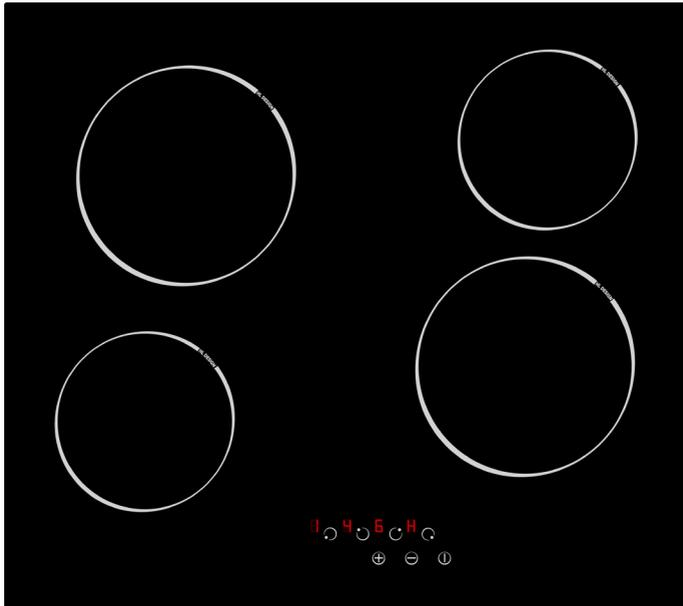

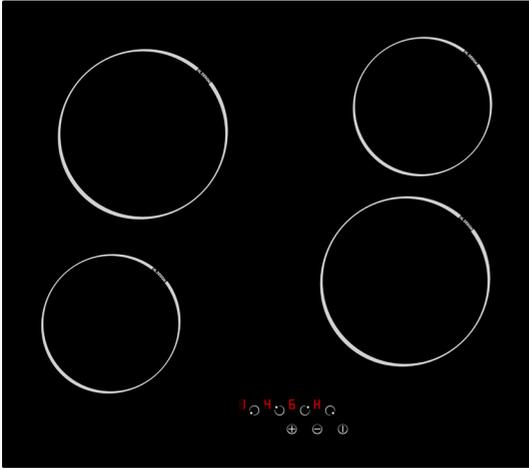

[01] x 1



[02] x 6

Note: Items 2 and 3 are pre-fitted in the factory  
there is no assembly of these components required.



[04] x 1

[03] x 6



# Touch Control Ceramic Hob

## UBTCC60LC.1

Installation  
**Installation**



23

# Let's get started...



## Getting started...

05

**Before you start**  
**Safety**

06  
07

## In more detail...

09

**Product functions**  
**Operation**  
**Care and maintenance**  
**Troubleshooting**  
**Recycling and disposal**  
**Technical and legal information**  
**CE Declaration of conformity**

10  
11  
14  
16  
17  
18  
21

## Appendix

**Installation**

22




# Getting Started...

**Before you start**  
**Safety**

06

07

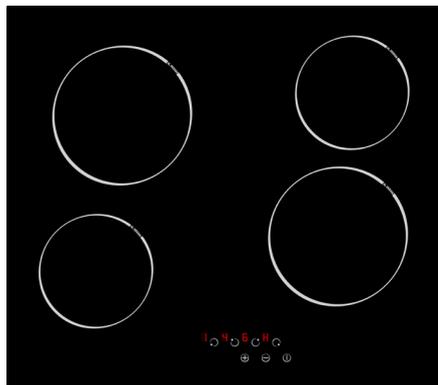





## Before you start

---

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0344 800 1128 (UK), 014475361 (Ireland)
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

## Tools required

---

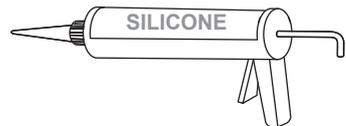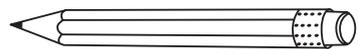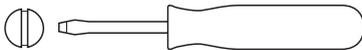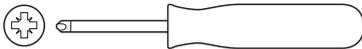

**These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.**



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.
- Damaged power cables should be replaced by a competent person or qualified electrician.
- Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- Do not allow the electric cables to touch the hot parts of the appliance.
- Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- Please dispose of the packing material carefully.
- Do not use flammable sprays in close vicinity to the appliance.

- We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of external timer or separated remote-control system.
- The appliance is for domestic use only.
- When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the metal surface.
- Do not store detergents or flammable materials beneath the hob.
- Do not leave hot oils or fats unattended as they may catch light.
- The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.

This appliance is designed for domestic use only. The manufacturer shall not in any way be held responsible for whatever injuries or damages are caused by incorrect installation or by unsuitable or incorrect use!



## In more detail...

<b>Product functions</b>	10
<b>Operation</b>	11
<b>Care and maintenance</b>	14
<b>Troubleshooting</b>	16
<b>Recycling and disposal</b>	17
<b>Technical and legal information</b>	18
<b>CE Declaration of conformity</b>	21

## Product functions

- > The ceramic hob caters for all kind of cooking, with its radiant heat cooking zones and its electronic touch controls and multi-functions, making it the ideal choice for the modern family.
- > The ceramic hob is extremely user-friendly, durable and safe.

## Special functions

### Protection from over-heating

- > A sensor monitors the temperature in the cooking zones. When the temperature exceeds a safe level, the cooking zone is automatically switched off.

### Residual heat indicator

- > When the hob has been operating for some time, there will be some residual heat. The letter "H" appears to warn you that it is too hot to touch the surface.

### Auto shutdown

- > Another safety feature of the ceramic hob is auto shutdown. This occurs whenever you forget to switch off a cooking zone.

The default shutdown times are shown in the table below:

Power level	The heating zone shutdown automatically after
1-2	6 hours
3-4	5 hours
5	4 hours
6-9	90 minutes

Protection against unintended operation.

If the electronic control detects a button being held down for approx 10 seconds it will switch off automatically. The control sends out an audible error signal to warn the sensors have detected the presence of an object. The display will indicate an error code ER03 if the hob is still hot. The display "H" and ER03 flash alternatively.

## Operation

---



Reference	Description
<b>A</b> 	Zone position
<b>B</b> 	Power regulating key (reduce)
<b>C</b> 	Power regulating key (increase)
<b>D</b> 	ON / OFF

Touch sensitive keys.

All operations can be performed using touch sensitive keys (capacitive sensors) located on the front of the ceramic glass (control panel). Each key has a corresponding display. All actions are confirmed by an audible bleep.

## Preparation before use

- > When the power is switched on, the buzzer will sound once and all the indicators will switch on for one second and then switch off. The hob is now in standby mode. Place the pan in the centre of the cooking zone.

## Operating instructions



### Caution

- When the ON/OFF key (D) is pressed, the ceramic hob returns to standby mode if no other operation is carried out within 20 seconds.

## Heating zone operation

When the ON/OFF key  is pressed, all the indicators show "0."

1. Select the cooking zone you wish to use by pressing the " key (A). The 0. symbol selected will stay fully lit. All other zone indicators will dim.
2. Select the power level by pressing the "+" key (C)  or "-" key (B) .
3. The power level will start at 0. Pressing the "+" will count up the power levels from 0 to 9 (max power) in numerical order. Pressing the "-" key will take the power straight from 0 to 9. Pressing the "-" key again will decrease the power level.
4. To adjust the power level at a later stage select the desired cooking zone first.

## Safety mode (Child lock)


To ensure the safety of children, the ceramic hob is fitted with an interlock device.

1. If one or more cooking zones are in use the child lock cannot be activated.
2. Please ensure that all of the cooking zones are in standby mode. Simultaneously press the "-" key and the furthest left zone selection key. The hob emits a beep and all keys should be released. At this point pressing the furthest left zone selection key once more will activate the child lock and L. will be shown in all 4 display windows.
3. In child lock mode, all keys are locked except the on/off key. No cooking zones can be activated. The appliance can only be switched on and off.
4. The child lock can be deactivated temporarily. Simultaneously press the "-" key and the furthest left zone activation key. The child lock will be switched off temporarily. It will not be showed during this operation but it will reactivate the next time the hob is switched on.
5. The child lock can be permanently deactivated. Simultaneously press the "-" key and furthest left zone selection key. The hob will emit a beep and all keys should be released. At this point pressing the "-" key again will deactivate the child lock function.

Heating Zone	Max. Power (W)
	1800
	1200
	1800
	1200

**Warning**

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

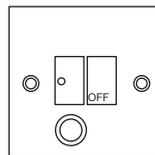

## Care and maintenance

---

### Care



Damaged power cables should be replaced by a competent person or qualified electrician.



For domestic use only.



Never place an empty pan on the hob as this will cause an error message to appear on the control panel.



When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the ceramic surface.



For sealed foods, please do not heat them before opening removing the lid so as to avoid any dangers of explosion due to heating expansion.



If the surface of the hob is cracked, disconnect from power supply to avoid any possibility of electric shocks.



Do not place rough or uneven pans on the hob, as they could damage the ceramic surface.



Avoid banging pots and pans down on the hob.  
The ceramic surface is tough but not unbreakable.



Do not put detergents or flammable materials beneath the hob.

## Care and maintenance

### Appliance cleanliness



#### Caution

- Avoid rubbing with any abrasive or with the base of the pans, etc, as this will wear the markings on the top of the ceramic hob over time.
- Clean the ceramic hob on a regular basis to prevent the build up of food residue.

> The appliance should be cleaned after use.

> The surface of the ceramic hob may be easily cleaned in the following way:

Type of dirt	Cleaning method	Cleaning materials
Lime scale	Apply white vinegar to the surface, then wipe it dry with soft cloth	Special ceramic cleaner
Burnt-on stains	Clean with damp cloth and dry it with a soft cloth	Special ceramic cleaner
Light stains	Clean with damp cloth and dry it with a soft cloth	Cleaning sponge
Melted plastics	Use a scraper suitable for ceramic glass to remove residue	Special ceramic cleaner

## Troubleshooting

---

Before calling the customer services, please check that the appliance is correctly connected, any of the following cases are not covered by the guarantee

- > Damage caused by improper use, storage or maintenance
- > Damage caused by unauthorised disassembly and repair.
- > Damage caused by misuse.
- > Using the ceramic hob for commercial purposes.

## Recycling and Disposal

---


### Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

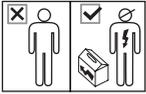


All installation work must be carried out by a competent person or qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

**Warning: THIS APPLIANCE MUST BE EARTHED.**

### Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Mains Supply could be connected to the Mains Voltage by Direct Connection

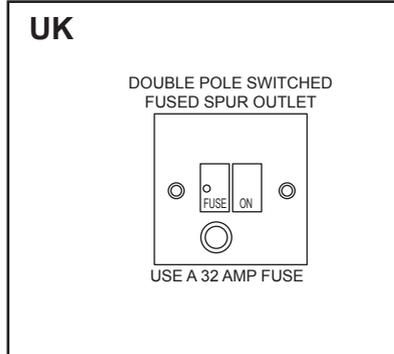

## Direct Connection

The appliance must be connected directly to the mains using an omnipolar circuit breaker with a minimum opening of 3 mm between the contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with the wiring diagram.

The cable must not be bent or compressed.


Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a safety hazard.

**WARNING: This is a Class I appliance and MUST be earthed.** This appliance is supplied with a 3 core mains cable coloured as follows:

L or Live = Brown

N or Neutral = Blue

E or Earth  $\oplus$  = Green and Yellow

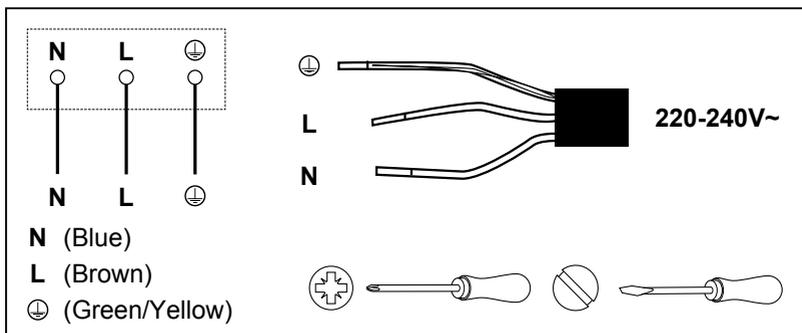

**This appliance requires a 32 Amp Miniature Circuit Breaker.**

To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services.

The manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance. Any permanent electrical installation must comply with the latest wiring regulations applicable to your country and for your own safety a qualified electrician or contractor should undertake the electrical installation.


## CE Declaration of Conformity

<b>MANUFACTURER:</b> CATA		
<b>ADDRESS:</b> C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)		
We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.		
<b>MACHINE APPLICATION:</b>	UBTCC60LC.1	
<b>TYPE:</b>	Ceramic Hob	
<b>EC DIRECTIVES APPLIED:</b>	Comply with the following European Directives 2014/35/EU: LVD ( Low Voltage Directive) and the 2014/30/EU: EMC (Electromagnetic Conformity)	
<b>APPLIED HARMONIZED STANDARDS:</b>		
Standard EN 60335-1 Safety of household and similar electrical appliances		
Standard EN 60335-2-6		
Standard EN 55014 Limits and methods of measurement of radio disturbance		
Standard EN 61000-3-2 Electromagnetic compatibility limits for harmonic.		
Standard EN 61000-4-5 Electromagnetic compatibility (EMC)		
<b>APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:</b> ISO9001.2008		
<b>PLACE:</b> Torelló	<div style="text-align: right;">           David Sala  <hr style="width: 100px; margin: 0 auto;"/>           Technical Manager         </div>	

The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

# Appendix...

Installation

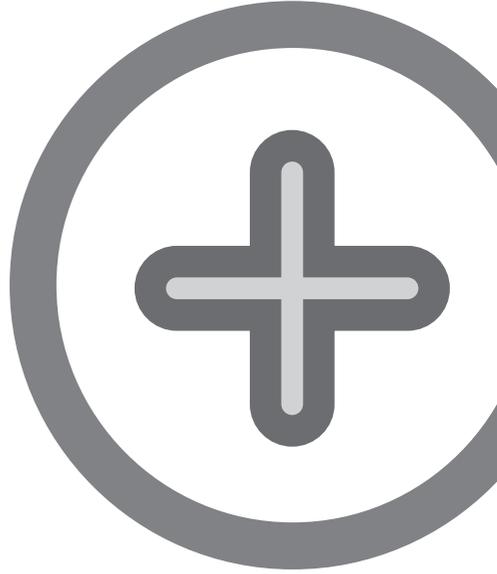

## Hob installation



### Caution

The ceramic hob must be installed by a suitably qualified person. Never try to install the appliance yourself. The ceramic hob must not be installed above refrigerators, freezers, washing machines or tumble dryers. The wall and the area above the hob should be able to withstand heat.

- > Cut a hole in the worktop of the size shown in the diagram. The worktop should be at least 30 mm thick and made of a heat-resistant material. Seal cut edge of the worktop with silicone or PVA.
- > Attach the brackets and place the hob into the cut out and push down firmly.

## Electrical connection



### Caution

- The cord should not be extended or folded into coil during operation.
- Adapters, multi-socket strips and extension leads must not be used.
- Overloading could result in a risk of fire.



### Caution

Before connecting to the power supply, check:



- The voltage meets requirements.
- The appliance uses an individual socket and does not share one with another electric appliance. A dedicated power protection switch must be incorporated in the fixed wiring in accordance with the wiring rules.

## Clearance



### Warning

Good ventilation is required around the appliance for easier dissipation of heat and low power consumption. Sufficient clearance is required around the appliance. The gap between the hob and any cupboard above it should be at least 650mm.

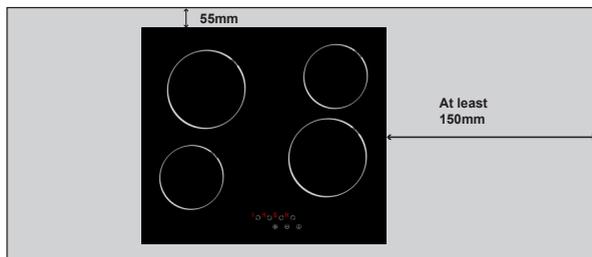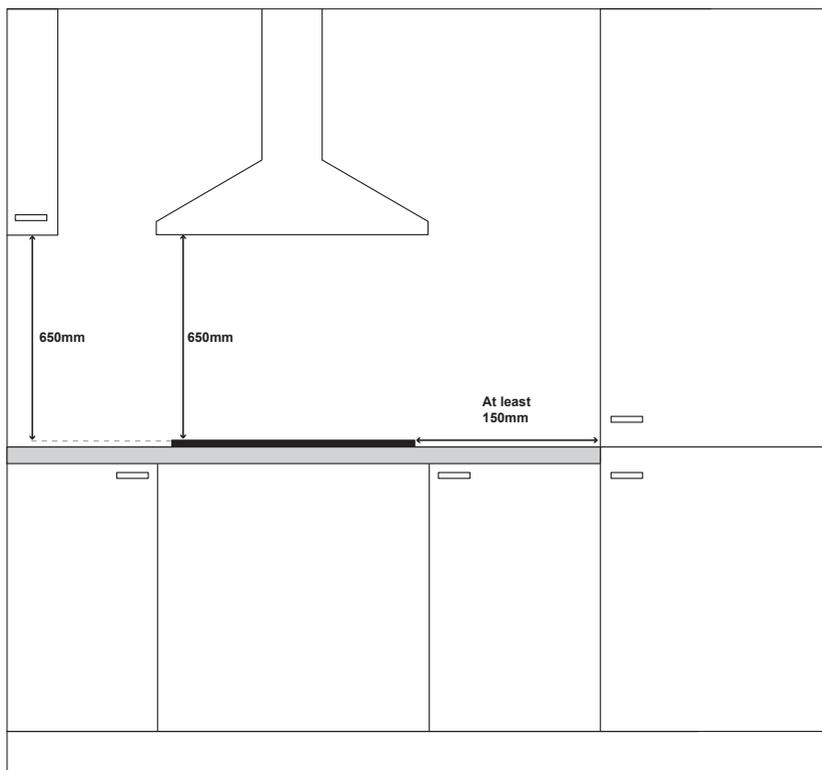

## Installation instructions

Remove all the packing materials plus disposal statement.

### Siting (see fig.1)



#### Caution

Good ventilation is required around the appliance for easier dissipation of heat and low power consumption.

Sufficient clearance is required around the appliance.

The appliance should not be placed near anything that may echo.


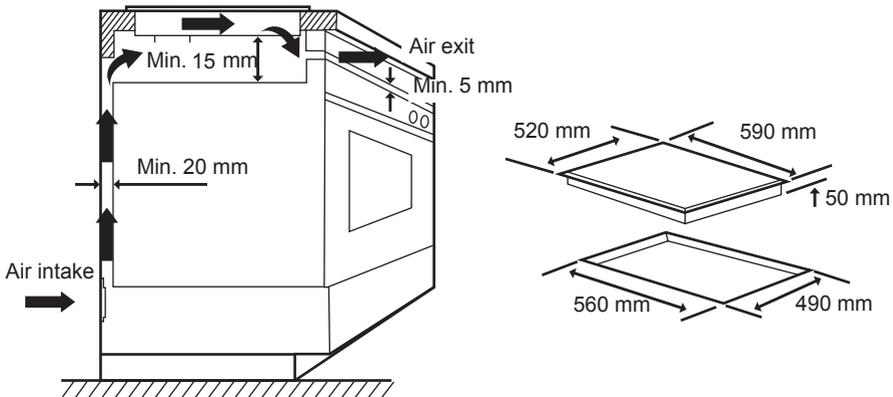


fig. 1


- > The ceramic hob must be well ventilated and the air inlet and outlet must not be blocked. Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the hotplate.
- > NOTE: The safety distance between the ceramic hob and the cupboard above the hotplate should be at least 650 mm.

## 01

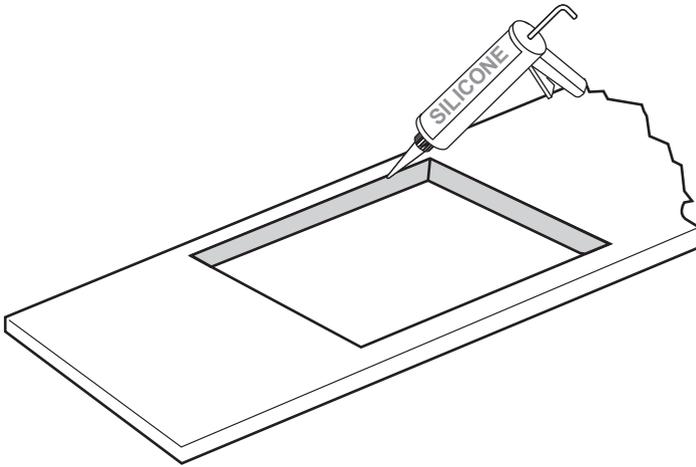

Cut out worktop to supplied dimensions shown in (fig 1) with suitable equipment and seal the cut edge as appropriate sealant.

## 02

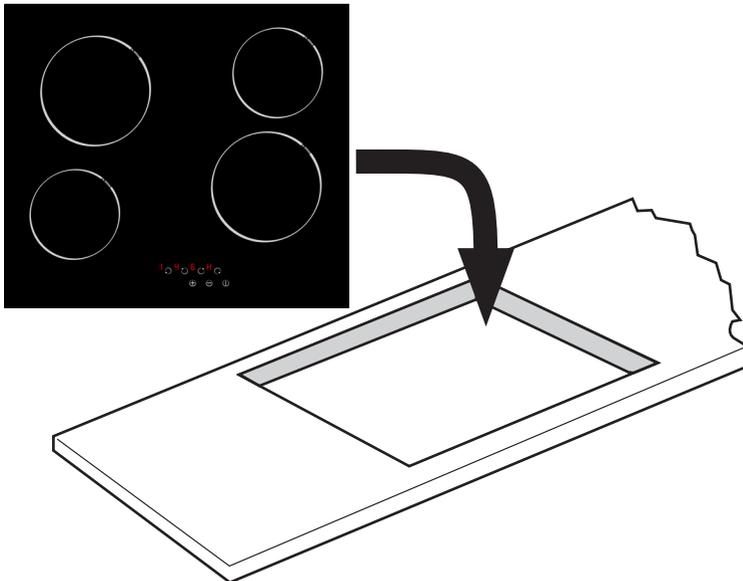

## 03



[04] x 1

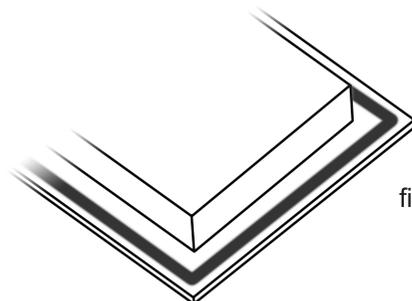


fig. 1



fig. 2

Remove the backing from the foam seal [04] and fit it along the underside edge of the hob, ensuring the ends overlap (fig. 1)

Once the seal is fitted position the hob into the cutout in the worktop. Apply gentle downwards pressure onto the hob to push it into the worktop ensuring a good seal around the outer edge (fig. 2)

**Note:** For electrical connection see **Technical and legal information** section

## Customer Service

If your product breaks down. To arrange an in guarantee service call, please contact customer services on the following numbers.

**UK and N.Ireland**

**T: 0344 800 1128 E: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)**

**[www.spareszone.co.uk](http://www.spareszone.co.uk)**

**Republic of Ireland (ROI)**

**T: 014475261 E: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)**





Apelson Appliances UK Ltd  
Unit 3 Normandy Landings  
Pope Street  
Castleford  
WF6 2AG  
United Kingdom

---