


31L BUILT-IN MICROWAVE OVEN INSTALLATION MANUAL


► INSTALLATION

Assemble Indicator Figure

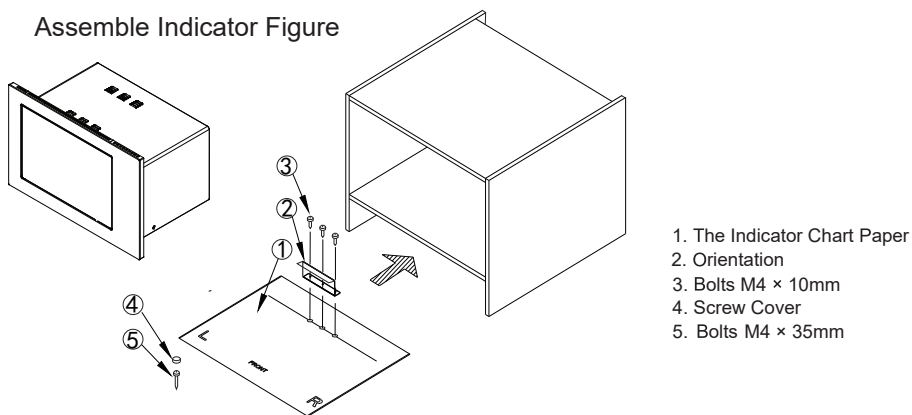

► INSTALLATION METHOD




1: Make sure the cabinet dimension are as follows:
550 (depth) x 565 mm (width) x 365 mm (height)

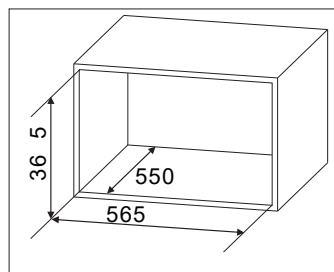

2: Put the indicator chart paper into the cabinet, and assemble the orientation in the position with three screw, this position has marked in the indicator chart paper

Attention:

1. Indicator chart should aligned with the left edge, right edge and front edge
2. The orientation fixing is shown as per picture 3

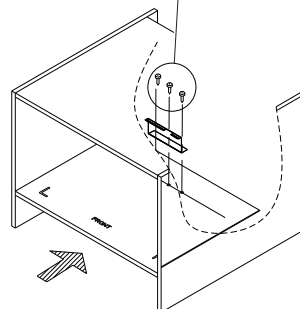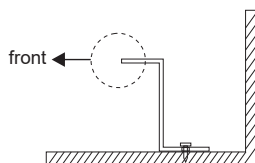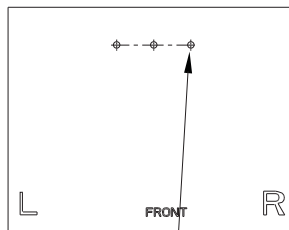

3. Put the microwave oven into the cabinet.
make sure both sides of microwave walls
are equally arranged and installed to the
cabinet and the orientation must securely
hold the back of the microwave oven

4. After the position fixed ,then open the
door of the microwave oven and locate
the screw hole infront of the cavity.
Assemble the screw (M4 x 35mm) to
tighten the microwave oven to the
cabinet and cover the screw head with
the screw cover provided to finish the
last step

Attention:

Cabinet back and bottom should
keep a distance of not less than 100mm
as shown below for heat venting purpose

